

HANDLING PROTECTION SELECTION GUIDE

Find the right gloves for your workstation!

Whether you need cut protection in a dry environment or an handling glove in an oily environment, this selection guide by Mapa Professional will help you to find the best solution.

You might need handling protection for several industries & applications such as :


- Automotive industry
- Aeronautics
- Metal industry
- Mechanical industry
- Building industry
- Glass industry

A solution for every hand that works






EN388:2016 STANDARD

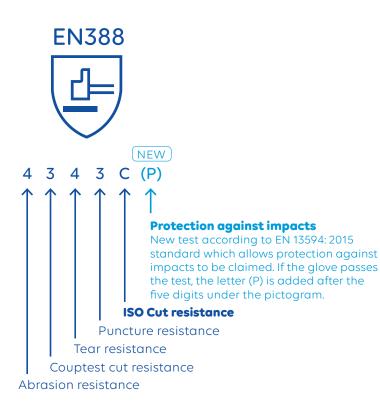



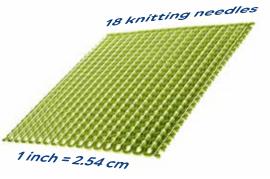

When choosing a comfortable glove, gauge is an important criterion. **Gauge** is a unit of measurement used to **determine the fineness of the knitted fabrics**. A lower gauge is knitted with thicker needles and yarns, and has fewer meshes per inch. On the contrary, a higher gauge is knitted with finer needles and yarns. Higher gauge gloves feel lighter-weight providing **great comfort and freedom of movement**.

DISCOVER THE MAPA PROFESSIONAL TECHNOLOGIES





Our **RESICOMFORT** coating technology offers the following benefits for precise handling operations in dry environments



